



## Die Casting COB Par, Tri-60W RGB



**COBPAR65T**

**USER MANUAL**

## Die Casting COB Par, Tri-60W RGB User Manual


Our Die-casting COB Par light offers many effects which you want; it is suitable for DJs, bands, nightclubs and other performers who want LED stage light. Please read the manual before operation.

### A. SPECIFICATION

1. Voltage: AC 100/240V, 50Hz/60Hz
2. Power consumption: 65W
3. LED: COB Tri-60W
4. Control feature: DMX mode, M/S, Built-in programs, auto running, sound active, static color
5. DMX channels: 3, 6, 7 CH
6. Beam angle: 90°
7. Weight: 3.68 kg
8. Size: 279\*156\*330mm



## B. Photometric Characteristic Chart

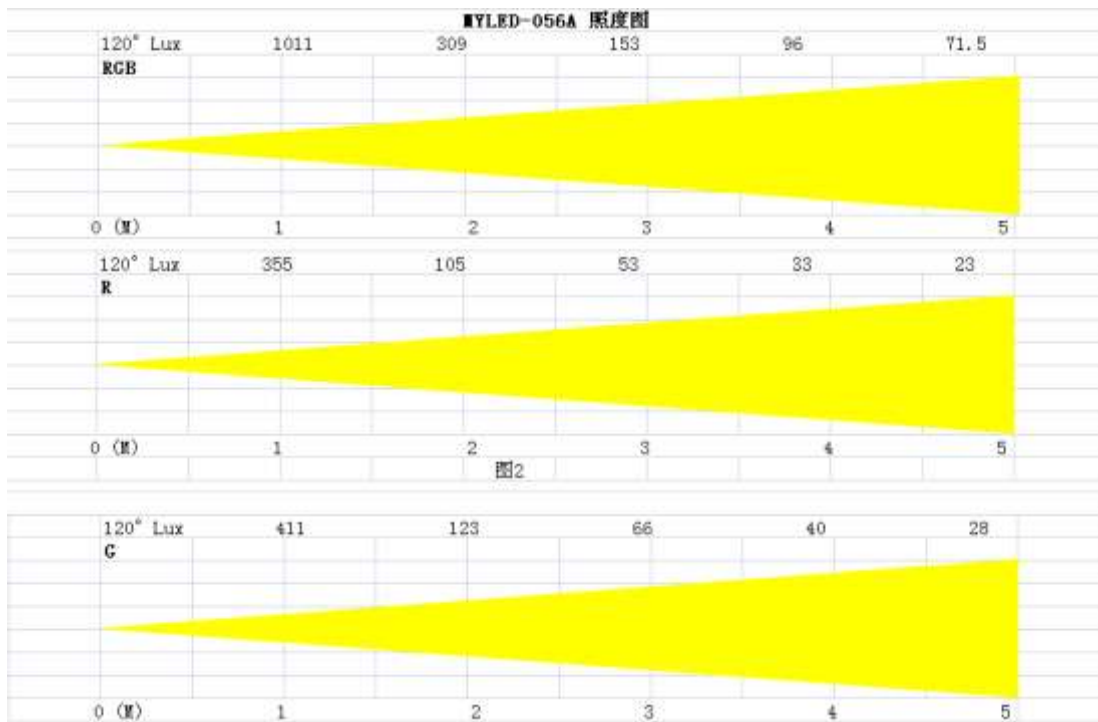

## C. OPERATION

This fixture is with rich effect programs, LED display for easier operation, there are six working modes:

- Auto running
- Built-in programs
- Static color
- Sound active
- DMX mode
- Slave mode

### 1. Auto Running Mode

Press the “MODE” enter auto running mode menu **AUTO**, the fixture will auto running six built-in programs **Pr.02~Pr.07**, the user can set their running speed, strobe speed in built-in programs mode, the preset effect will operation in turn in auto running mode.

### 2. Built-in Programs Mode

1) Press the “MODE”, enter built-in programs mode menu “**Pr.01**”.

2) Press the “UP” or “DOWN”, select the effect programs **Pr.01~Pr.07**.

When LED display show “**Pr.01**”, press the “SETUP” can enter to choose static color, press the “UP” or “DOWN” can select twelve built-in static color(see sheet 2), press the “SETUP” can set the selected color strobe **F500**, through “UP” or “DOWN” can adjust the strobe speed “**F500~F599**”.

3) When LED display show “**Pr.02~Pr.07**”, the first time press the “SETUP”, will show “**SP.01**”, at this time through the “UP” or “DOWN” to set the programs running speed **SP.00~SP.FL**; the second time press the “setup”, will show “**F500**”, at this time press the “UP” or “DOWN” to set the programs strobe speed **F500~F599**.

Sheet 2 LED static color

LED display	Color
0-9-6	White
1-1-1	Red
2-2-4	Orange
3-0-9	Pale yellow

4--9	Green
5-96	Cyan
6--6	Blue
7-26	Purple
8-24	Pink
9-29	Yellow
1000	Cool white
1100	Warm white

Sheet 3 Built-in program

Program	Description
P201	Static color
P202	Seven color fading
P203	Three color fading
P204	Dream
P205	Seven color hopping
P206	Three color hopping
P207	Other hopping

### 3. Dimming Mode

This mode is dimming mode “Colr”, press the “SETUP” enter to choose R, G, B dimming and single color strobe.

Setting	Operation instruction
2255	R LED diming , press UP and DOWN to set the “R“ brightness (0—255)
9255	G LED dimming, press UP and DOWN to set the ”G” brightness(0--255)
6255	B LED dimming , press UP and DOWN to set the ”G” brightness (0--255)
F500	Strode mode , press UP and DOWN to set the speed ( 0—99)

### 4. Sound-Active Mode

- 1) Press the “MODE”, enter to sound active mode menu “50.3 1”.
- 2) Press the “UP” or “DOWN”, set the sensitivity of the sound active “50.00~50.3 1”.

### 5. DMX Mode

- 1) Press the “MODE”, enter DMX mode menu “d00 1”.

This product has automatic identification functions. Once receive DMX signal will enter to DMX mode. Once the signal disappear, will return the former mode.

- 2) When the LED display shows “Addr.”, press the “UP” or “DOWN” button, set the DMX address “001~0512”.
- 3) When the LED display shows “Chan”, press the “SETUP” button enters to set the DMX working modes: 3-ch, 6-ch, 7-ch
- 4) When the LED display shows “Fade”, press the “SETUP” button enters to the DMX Dimming mode. Press “UP” and “DOWN” button to choose turn on or turn off the dimming function. It will be hysteresis phenomenon when under dimming mode.

DMX Mode1: 3-ch

Channel	Value	Function
1	0-255	R 0-100%
2	0-255	G 0-100%
3	0-255	B 0-100%

DMX Mode2: 6-ch

Channel	Value	Function
1	0-255	Master dimming
2	0-255	R 0-100%
3	0-255	G 0-100%
4	0-255	B 0-100%
5	0-10	No function
	11-255	Sound-active
6	0-19	LED no strobe
	20-255	Strobe(CH1-CH4), larger value, faster speed
	0-255	Sound-active sensitivity

DMX Mode 3: 7-ch

Channel	Value	Function
1	0-255	Master dimming
2	0-255	R 0-100%
3	0-255	G 0-100%
4	0-255	B 0-100%
5	0-24	No function
	25-49	Auto running
	50-74	Program 2
	75-99	Program 3
	100-124	Program 4
	125-149	Program 5
	150-174	Program 6
	175-199	Program 7
	200-255	Sound active
6	0-255	Program running speed, larger value, faster speed
	0-19	LED no strobe
7	0-255	Strobe speed, larger value, faster speed

## 6. Master/slave Mode

This mode is M/S Mode, the slave fixtures will follow the programs after they were linked to the master fixture via DMX cables.

### C. Restore factory setting

Press “MODE”, LED displays **1999**, enter to the setting menu **FFSE**.

Press the “MODE” and “SETUP” at same time for a few seconds later, will restore factory settings, the data will be initialized.

### D. Product information

Press “Mode”, LCD shows **Info** then enter to the product information. Press “UP” and “DOWN” to choose the options.





When shows **0123**, press “SETUP” to check the product version

When shows **FF00**, press “SETUP” to check the temperature control

When shows **no**, means no temperature control

When shows **0-00**, means normal temperature control

When shows **0-00**, means temperature control dysfunction

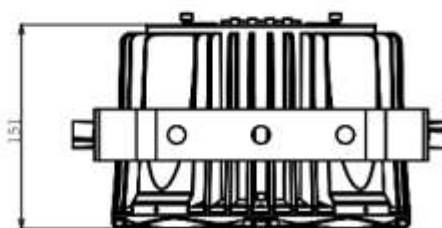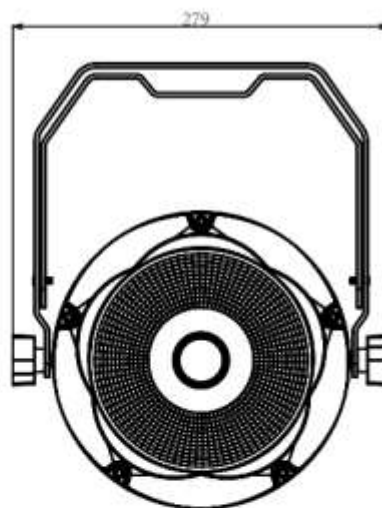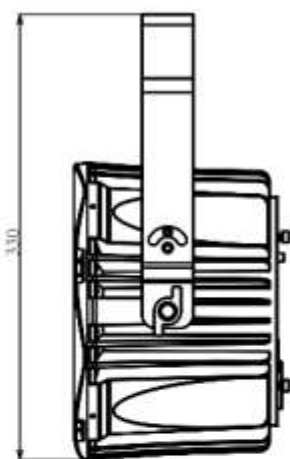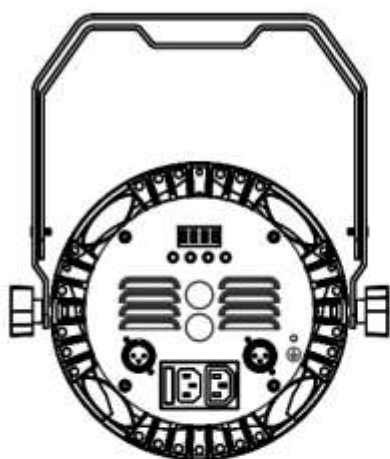

# INVOLIGHT



**ООО «ИНВАСК»**

**Адрес: 143406, Московская область, Красногорск, ул. Ленина, дом 3-Б**

**Тел. (495) 565-0161 (многоканальный)**

**Факс (495) 565-0161, доб. 105**

**<http://www.invask.ru> e-mail: [invask@invask.ru](mailto:invask@invask.ru)**

**Сервис-центр «ИНВАСК»**

**Адрес: 143400, Московская область, Красногорск, Коммунальный квартал,  
дом. 20**

**Тел. (495) 563-8420, (495) 564-5228**

**e-mail: [service@invask.ru](mailto:service@invask.ru)**